


APPLY BARRIBOND IN CRACKS AND GAPS

STEP 3

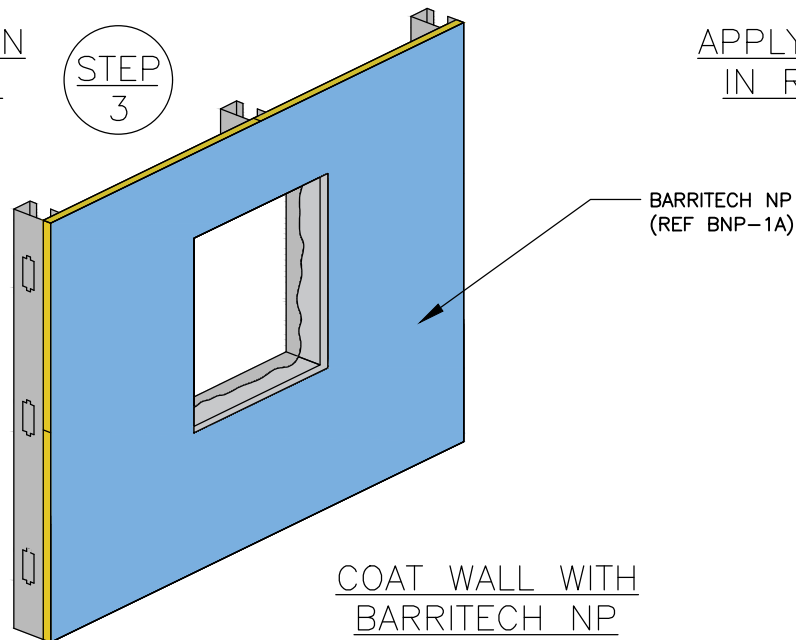

APPLY BARRITHANE VP IN ROUGH OPENING

AS A MANUFACTURER OF CONSTRUCTION MATERIALS, CARLISLE, DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN OR ENGINEERING. ARCHITECT OR OWNERS REPRESENTATIVE MUST VERIFY SUITABILITY OF DETAILS.

BNP-5E

BARRITECH NP/BARRITHANE VP
IN ROUGH OPENING

CARLISLE
COATINGS & WATERPROOFING

© 2018 CARLISLE CORPORATION